

Flush Mount Kit for Panda Wireless Keypad Kit di Installazione ad incasso per la tastiera radio Panda

Kit de montaje empotrado para teclado inalámbrico Panda

Kit d'encastrement pour clavier Panda sans fil Kit para Montagem Embutida do Teclado Sem Fio Panda

Flush Mount Kit voor het draadloze Panda bediendeel

Model/Modello/Modelo/ Modèle : RA332KPFM

EN IT ES FR PR NL

Installation Instructions / Istruzioni per l'installazione / Instrucciones de instalación / Instructions d'installation / Instruções de Instalação / Installatie instructies

For more information about RISCO Group's branches, distributors and full product line, please visit [riscogroup.com](http://www.riscogroup.com)

 
EN

Compatible with RISCO Group's Panda Wireless Keypad, the flush mount kit can be used to install your keypad unobtrusively into your wall.


For the Panda Wireless Keypad instructions, refer to our website at: <http://www.riscogroup.com/support/downloads>.

1. Unpack your flush mount kit ensuring that you have all the required pieces:


- Mounting template
- Plastic mounting bracket
- 2 Tabs
- 2 screws
- 2 nuts

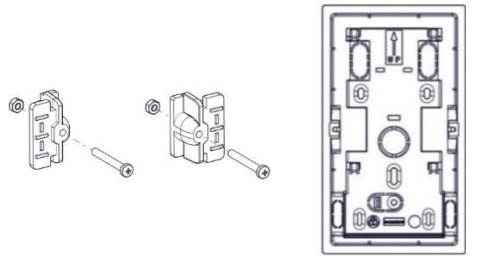

 2. Cut out an opening in the plaster wall per the drawing.

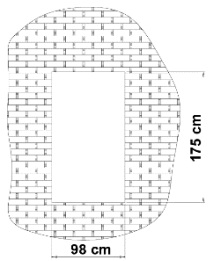


 3. Install the plastic mounting bracket into the opened hole in the wall.

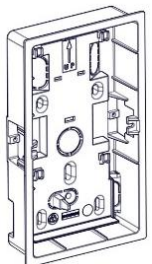


IMPORTANT! Observe the "UP" marking and arrow on the plastic mounting bracket for correct mounting orientation.

 
4. Insert a screw in each tab and attach a nut to the end of each screw. Position the two tabs in their slots and secure the two screws as shown.

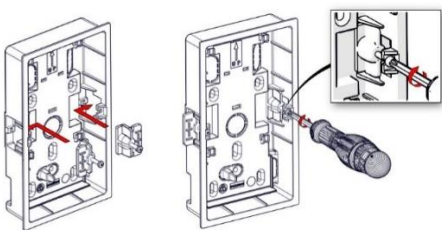

 
5. With the keypad's mounting bracket disassembled, attach the keypad onto the plastic mounting bracket.

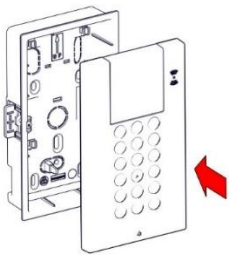

 6. Push the keypad downward until it locks into place.

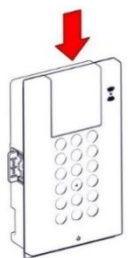

 7. Configure the keypad according to the supplied installation guidelines (refer to the Panda Wireless Keypad Instructions).

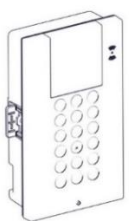

9. For battery replacement, push the keypad upward to separate the keypad from the plastic mounting bracket (refer to the Panda Wireless Keypad Instructions).



Ordering Information


P/N	Description
RA332KPFM00A	Panda WL Keypad Flush Mount Kit

IT


Il kit di installazione ad incasso è compatibile con la tastiera radio della serie Panda di RISCO Group. Il kit viene usato per installare la tastiera a filo del muro incassandola all'interno del muro stesso. Per il manuale di installazione e configurazione della tastiera fare riferimento al sito www.riscogroup.com/italy, assistenza/downloads.

1. Verificare che il kit contenga tutti i pezzi richiesti per l'installazione:

 - Dima per il montaggio
- Staffa di fissaggio in plastica
- 2 linguette plastiche di fissaggio
- 2 viti
- 2 dadi

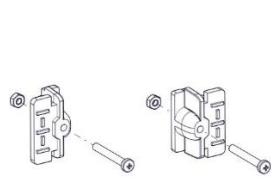


 2. Predisporre un alloggiamento per la staffa nella parete in gesso, come indicato nel disegno.

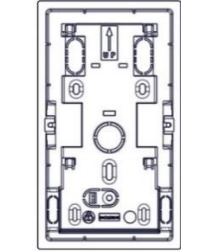


3. Installare la staffa in plastica all'interno del foro di apertura fatto nel muro.

 
IMPORTANTE! Notare il segno "UP" e la freccia sulla plastica della staffa per il corretto orientamento di montaggio.

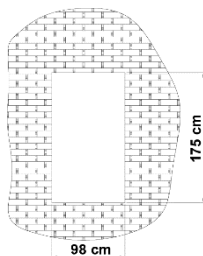

 
4. Inserire una vite in ogni linguetta plastica e avvitare il dado alla fine di ognuna delle due viti. Posizionare le due linguette nei loro alloggiamenti e fissarle con le due viti come mostrato.

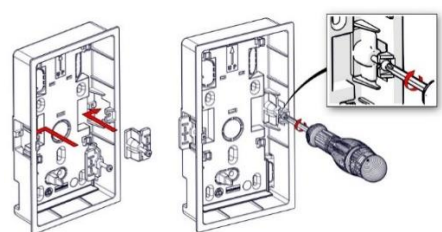

 
5. Con la staffa di montaggio della tastiera smontata, agganciare la tastiera sulla staffa di montaggio in plastica.

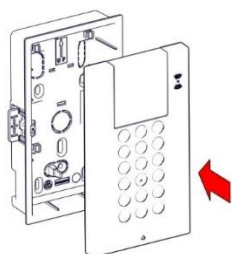

 6. Spingere la tastiera all'interno della staffa ad incasso in plastica fino a che non si blocca in posizione.

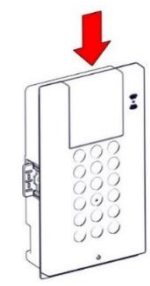

 7. Configurare la tastiera come da istruzioni fornite con la stessa (fare riferimento alle Istruzioni della tastiera radio Panda).

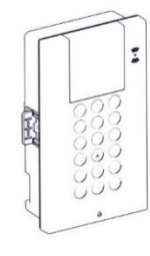

8. Per la sostituzione delle batterie della tastiera, spingere la tastiera dal basso per separarla dalla staffa di montaggio ad incasso (fare riferimento alle Istruzioni della tastiera radio Panda per la sostituzione delle batterie).



Informazioni per l'ordine

Codice prodotto	Descrizione
RA332KPFM00A	Kit di montaggio ad incasso per la tastiera radio Panda

ES

 
El kit de montaje empotrado es compatible con el teclado inalámbrico Panda de RISCO Group y se puede usar para instalar el teclado de forma discreta en la pared.

Para ver las instrucciones del teclado inalámbrico Panda, visite nuestro sitio web:


<http://www.riscogroup.com/support/downloads>.

1. Desembale el kit de montaje empotrado y compruebe que contiene todas las piezas necesarias:

- Plantilla de montaje
- Soporte de montaje de plástico
- 2 pestañas
- 2 tornillos
- 2 tuercas

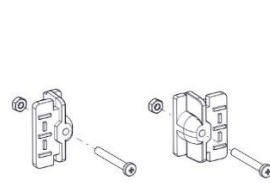


 2. Corte una abertura en la pared de yeso según el dibujo.

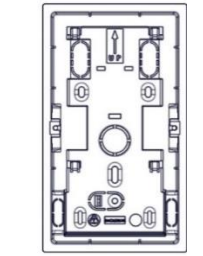


3. Instale el soporte de montaje de plástico en el agujero de la pared.

 
¡IMPORTANTE! Tenga en cuenta la marca ascendente y la flecha del soporte de montaje de plástico para montarlo con la orientación correcta.

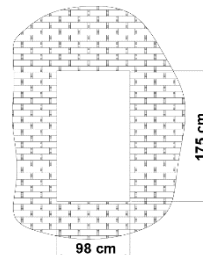

 
4. Inserte un tornillo en cada pestaña y coloque una tuerca al final de cada tornillo. Coloque las dos pestañas en sus ranuras y fije dos tornillos, tal y como se muestra.

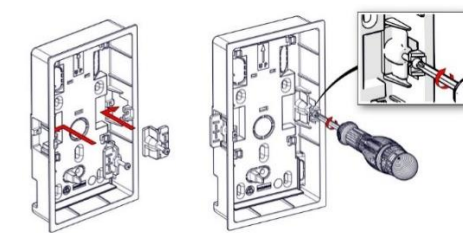

 
5. Con el soporte del teclado desmontado, coloque el teclado en el soporte de montaje de plástico.

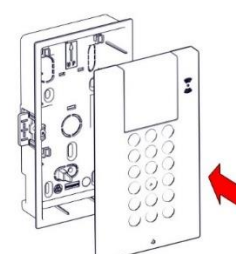

 
6. Empuje el teclado hacia abajo hasta que quede fijado en su posición.

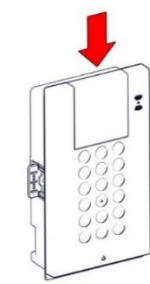

 7. Configure el teclado según las instrucciones de instalación suministradas (consulte las instrucciones del teclado inalámbrico Panda).

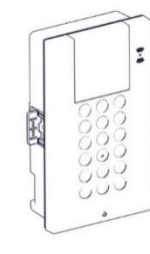

 8. Para sustituir la batería, empuje el teclado hacia arriba para separarlo del soporte de montaje de plástico (consulte las instrucciones del teclado inalámbrico Panda).

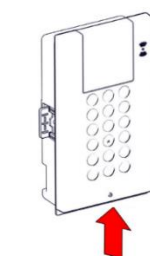

FR

 
Compatible avec le clavier Panda sans fil de RISCO Group, le kit d'encastrement vous permet d'installer votre clavier discrètement sur un mur.

Pour obtenir les instructions d'utilisation du clavier Panda sans fil, rendez-vous sur notre site Internet


<http://www.riscogroup.com/support/downloads>.

1. Déballez votre kit d'encastrement et assurez-vous de disposer des pièces suivantes :

- Gabarit de montage
- Support de montage en plastique
- 2 attaches
- 2 vis
- 2 écrous

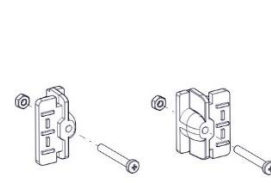


 2. Découpez une ouverture dans le mur de plâtre selon le dessin.

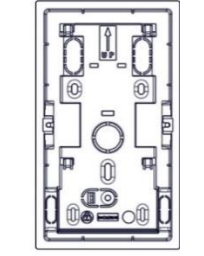


3. Installez le support de montage en plastique dans le trou pratiqué dans le mur.

 
IMPORTANT. Respectez l'indication « UP » et le sens de la flèche sur le support de montage en plastique pour orienter correctement le kit.

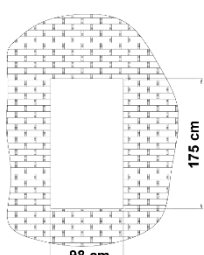

 
4. Insérez une vis dans chaque attache et fixez un écrou à l'extrémité. Insérez les deux attaches dans leurs logements et fixez-les à l'aide des vis, comme illustré.

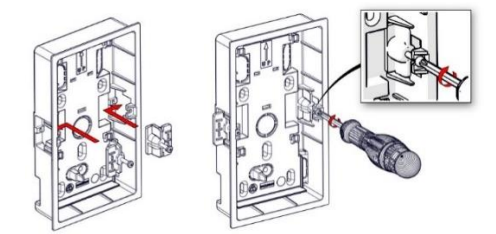

 5. Fixez le clavier sur le support de montage en plastique.

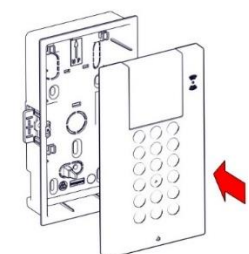

 
6. Appuyez sur le clavier vers le bas pour le mettre en place.

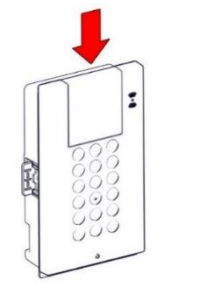

7. Configurez le clavier en suivant les instructions d'installation fournies (reportez-vous aux Instructions du clavier Panda sans fil).



 8. Pour remplacer la pile, appuyez sur le clavier vers le haut pour le détacher du support de montage en plastique (reportez-vous aux Instructions du clavier Panda sans fil).

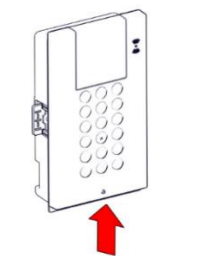

Informations de commande

Réf	Description
RA332KPFM00A	Kit d'encastrement pour clavier Panda sans fil


Información para pedidos

Número de referencia	Descripción
RA332KPFM00A	Kit de montaje empotrado para teclado inalámbrico Panda


Compatível com o Teclado Sem Fio Panda do Grupo RISCO, o kit para montagem embutida pode ser usado para instalar o seu teclado discretamente na parede.

Para instruções do Teclado Sem Fio Panda, consulte o nosso website em: <http://www.riscogroup.com/support/downloads>.

 - Desembale o seu kit para montagem embutida, verifique que possui todas as peças necessárias:
 - Molde para montagem
 - Suporte plástico de montagem
 - 2 Abas
 - 2 parafusos
 - 2 porcas

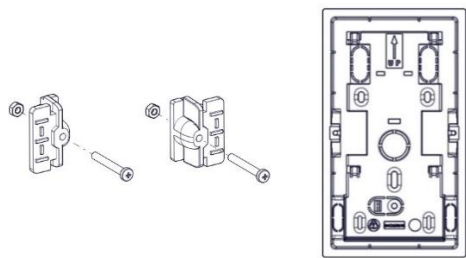


 - Recorte uma abertura na parede de gesso de acordo com o desenho.

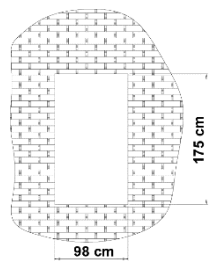


- Instale o suporte plástico de montagem nos furos feitos na parede.

 
IMPORTANTE! Observe a marcação "UP" (para cima) e a seta no suporte plástico de montagem para a orientação correta da montagem.

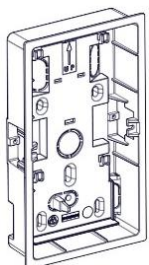

 
- Insira um parafuso em cada aba e fixe uma porca na extremidade de cada parafuso. Posicione as duas abas nos encaixes e fixe os dois parafusos conforme mostrado.

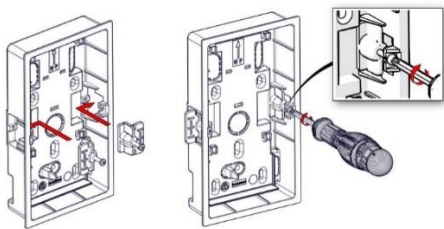

 
- Com o suporte de montagem do teclado desmontado, fixe o teclado ao suporte plástico de montagem.

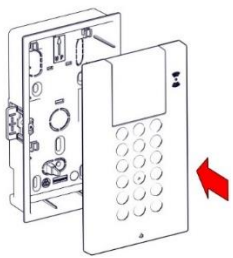

 
- Empurre o teclado para baixo até encaixar corretamente.

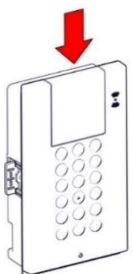

 - Configure o teclado de acordo com as instruções de instalação fornecidas (consulte as Instruções do Teclado Sem Fio Panda).

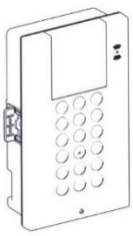

 - Para substituir baterias, empurre o teclado para cima para separá-lo do suporte plástico de montagem (consulte as Instruções do Teclado Sem Fio Panda).

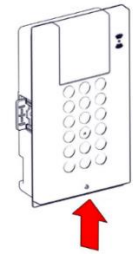


De flush mount kit voor RISCO Group's draadloze Panda bediendeel kan gebruikt worden om het bediendeel onopvallend te installeren op de muur.

Voor meer instructies over het draadloze Panda bediendeel, gelieve onze website te bezoeken:


<http://www.riscogroup.com/support/downloads>.

- Pak uw flush mount kit uit en controleer dat u alle bijgeleverde stukken hebt:

 - Installatie sjabloon
- Plastic monterbeugel
- 2 vergrendelbeugels
- 2 schroeven
- 2 moeren

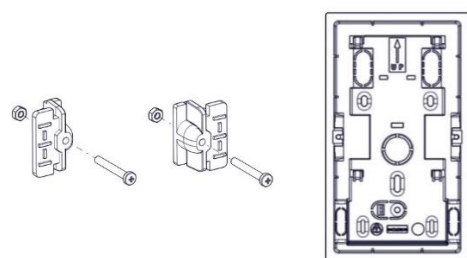


 - Maak een opening in de gipswand volgens de tekening.

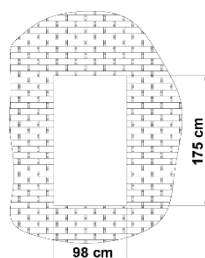


- Installeer de plastic monterbeugel in de opening van de muur.

 
LET OP! Let op dat de "UP" markering en pijl in de beugel naar boven wijst voor een correcte plaatsing.

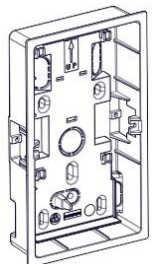

 
- Plaats een schroef in elke vergrendelbeugel en monteer een moer op het einde van elke schroef. Positioneer de twee vergrendelbeugels in hun openingen en draai de twee schroeven vast zoals in de afbeelding wordt weergegeven.

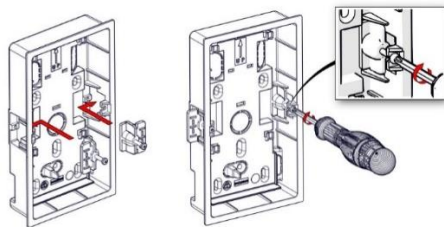

 
- Plaats het bediendeel zonder de origineel bijgeleverde beugel op de plastic muurbeugel.

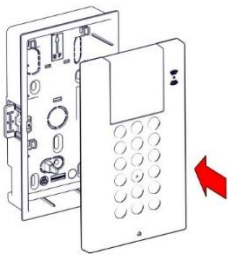

 - Schuif het bediendeel naar beneden toe tot het op zijn plaats vastzit.

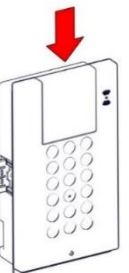

 - Configureer het bediendeel volgens de meegeleverde installatie richtlijnen (Wij verwijzen u verder naar de instructies van het draadloze Panda bediendeel).

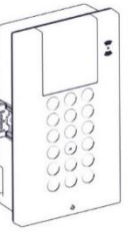

- Voor het vervangen van de batterij dient u het bediendeel naar boven toe te schuiven om deze te verwijderen van de plastic muurbeugel (Wij verwijzen u verder naar de instructies van het draadloze Panda bediendeel).



Contacting RISCO Group

RISCO Group is committed to customer service and product support. You can contact us through our website (www.riscogroup.com) or at the following telephone and fax numbers:

United Kingdom

Tel: +44-(0)-161-655-5500
support-uk@riscogroup.com
Italy
Tel: +39-02-66590054
support-it@riscogroup.com
Spain
Tel: +34-91-490-2133
support-es@riscogroup.com

France

Tel: +33-164-73-28-50
support-fr@riscogroup.com
Belgium (Benelux)
Tel: +32-2522-7622
support-be@riscogroup.com
China (Shanghai)
Tel: +86-21-52-39-0066
support-cn@riscogroup.com

Standard Limited Product Warranty ("Limited Warranty")

RISCO Ltd. ("RISCO") guarantee RISCO's hardware products ("Products") to be free from defects in materials and workmanship when used and stored under normal conditions and in accordance with the instructions for use supplied by RISCO, for a period of (i) 24 months from the date of delivery of the Product (the "Warranty Period"). This Limited Warranty covers the Product only within the country where the Product was originally purchased and only covers Products purchased as new. **Contact with customers only.** This Limited Warranty is solely for the benefit of customers who purchased the Products directly from RISCO or from an authorized distributor of RISCO. RISCO does not warrant the Product to consumers and nothing in this Warranty obligates RISCO to accept Product returns directly from end users who purchased the Products for their own use from RISCO's customer or from any installer of RISCO, or otherwise provide warranty or other services to any such end user directly. RISCO's authorized distributor or installer shall handle all interactions with its end users in connection with this Limited Warranty. RISCO's authorized distributor or installer shall make no warranties, representations, guarantees or statements to its end users or other third parties that suggest that RISCO has any warranty or service obligation to, or any contractual privity with, any recipient of a Product.

Remedies. In the event that a material defect in a Product is discovered and reported to RISCO during the Warranty Period, RISCO shall accept return of the defective Product in accordance with the below RMA procedure and, at its option, either (i) repair or have repaired the defective Product, or (ii) provide a replacement product to the customer.

Return Material Authorization. In the event that you need to return your Product for repair or replacement, RISCO will provide you with a Return Merchandise Authorization Number (RMA#) as well as return instructions. Do not return your Product without prior approval from RISCO. Any Product returned without a valid, unique RMA# will be refused and returned to the sender at the sender's expense. The returned Product must be accompanied with a detailed description of the defect discovered ("Defect Description") and must otherwise follow RISCO's then-current RMA procedure published in RISCO's website at www.riscogroup.com in connection with any such return. If RISCO determines in its reasonable discretion that any Product returned by customer conforms to the applicable warranty ("Non-Defective Product"), RISCO will notify the customer of such determination and will return the applicable Product to customer at customer's expense. In addition, RISCO may propose and assess customer a charge for testing and examination of Non-Defective Product.

Entire Liability. The repair or replacement of Products in accordance with this Limited Warranty shall be RISCO's entire liability and customer's sole and exclusive remedy in case a material defect in a Product is discovered and reported as required herein. RISCO's obligation and this Limited Warranty are contingent upon the full payment by customer for such Product and upon a proven weekly testing and examination of the Product functionality.

Limitations. This Limited Warranty is the only warranty made by RISCO with respect to the Products. The warranty is not transferable to any third party. To the maximum extent permitted by applicable law, this Limited Warranty shall not apply and will be void if: (i) the conditions set forth above are not met (including, but not limited to, full payment by customer for the Product and a proven weekly testing and examination of the Product functionality); (ii) if the Products or any part or component thereof: (a) have been subjected to improper operation or installation; (b) have been subject to neglect, abuse, willful damage, abnormal working conditions, failure to follow RISCO's instructions (whether oral or in writing); (c) have been misused, altered, modified or repaired without RISCO's written approval or combined with, or installed on products, or equipment of the customer or of any third party; (d) have been damaged by any factor beyond RISCO's reasonable control such as, but not limited to, power failure, electric power surges, or unsuitable third party components and the interaction of software therewith or (e) any failure or delay in the performance of the Product attributable to any means of communication provided by any third party service provider, including, but not limited to, GSM interruptions, lack of or internet outage and/or telephony failure. **BATTERIES ARE EXPLICITLY EXCLUDED FROM THE WARRANTY AND RISCO SHALL NOT BE HELD RESPONSIBLE OR LIABLE IN RELATION THERETO, AND THE ONLY WARRANTY APPLICABLE THERETO, IF ANY, IS THE BATTERY MANUFACTURER'S WARRANTY.** RISCO does not install or integrate the Product in the end user's security system and is therefore not responsible for and cannot guarantee the performance of the end user's security system which uses the Product or which the Product is a component of.

This Limited Warranty applies only to Products manufactured by or for RISCO. Further, this Limited Warranty does not apply to any software (including operating system) added to or provided with the Products or any third-party software, even if packaged or sold with the RISCO Product. Manufacturers, suppliers, or third parties other than RISCO may provide their own warranties, but RISCO, to the extent permitted by law and except as otherwise specifically set forth herein, provides its Products "AS IS". Software and applications distributed or made available by RISCO in conjunction with the Product (with or without the RISCO brand), including, but not limited to system software, as well as P2P services or any other service made available by RISCO in relation to the Product, are not covered under this Limited Warranty. Refer to the Terms of Service at: www.riscogroup.com/warranty for details of your rights and obligations with respect to the use of such applications, software or any service. RISCO does not represent that the Product may not be compromised or circumvented; that the Product will prevent any personal injury or property loss by burglary, robbery, fire or otherwise, or that the Product will in all cases provide adequate warning or protection. A properly installed and maintained alarm may only reduce the risk of a burglary, robbery or fire without warning, but it is not insurance or a guarantee that such will not occur or will not cause or lead to personal injury or property loss. **CONSEQUENTLY, RISCO SHALL HAVE NO LIABILITY FOR ANY PERSONAL INJURY, PROPERTY DAMAGE OR OTHER LOSS BASED ON ANY CLAIM AT ALL INCLUDING A CLAIM THAT THE PRODUCT FAILED TO GIVE WARNING.**

EXCEPT FOR THE WARRANTIES SET FORTH HEREIN, RISCO AND ITS LICENSORS HEREBY DISCLAIM ALL EXPRESS, IMPLIED OR STATUTORY, REPRESENTATIONS, WARRANTIES, GUARANTEES, AND CONDITIONS WITH REGARD TO THE PRODUCTS, INCLUDING BUT NOT LIMITED TO ANY REPRESENTATIONS, WARRANTIES, GUARANTEES, AND CONDITIONS OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS, TO THE EXTENT PERMITTED BY LAW. WITHOUT LIMITING THE GENERALITY OF THE FOREGOING, RISCO AND ITS LICENSORS DO NOT REPRESENT OR WARRANT THAT: (I) THE OPERATION OR USE OF THE PRODUCT WILL BE TIMELY, SECURE, UNINTERRUPTED OR ERROR-FREE; (ii) THAT ANY FILES, CONTENT OR INFORMATION OF ANY KIND THAT MAY BE ACCESSED THROUGH THE PRODUCT SHALL REMAIN SECURED OR NON-DAMAGED. CUSTOMER ACKNOWLEDGES THAT NEITHER RISCO NOR ITS LICENSORS CONTROL THE TRANSFER OF DATA OVER COMMUNICATIONS FACILITIES, INCLUDING THE INTERNET, GSM OR OTHER MEANS OF COMMUNICATIONS AND THAT RISCO'S PRODUCTS, MAY BE SUBJECT TO LIMITATIONS, DELAYS, AND OTHER PROBLEMS INHERENT IN THE USE OF SUCH MEANS OF COMMUNICATIONS. RISCO IS NOT RESPONSIBLE FOR ANY DELAYS, DELIVERY FAILURES, OR OTHER DAMAGE RESULTING FROM SUCH PROBLEMS. RISCO WARRANTS THAT ITS PRODUCTS DO NOT, TO THE BEST OF ITS KNOWLEDGE, INFRINGE UPON ANY PATENT, COPYRIGHT, TRADEMARK, TRADE SECRET OR OTHER INTELLECTUAL PROPERTY RIGHT IN ANY EVENT RISCO SHALL NOT BE LIABLE FOR ANY AMOUNTS REPRESENTING LOST REVENUES OR PROFITS, PUNITIVE DAMAGES, OR FOR ANY OTHER INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF THEY WERE FORESEEABLE OR RISCO HAS BEEN INFORMED OF THEIR POTENTIAL.



© RISCO Group 05/2022

5IN2786 B

Informações sobre pedidos

N/P	Descrição
RA332KPFM00A	Kit para Montagem Embutida do Teclado Sem Fio Panda

Ordering Information

P/N	Beschrijving
RA332KPFM00A	DL Panda Bediendeel Flush Mount Kit