

## COMPATABLE MODELS

**X412** AMC X412 Alarm Panel - FW3.78

### 1. USERS

- <USER CODE LENGTH> 4
- <TECHNICIAN CODE> (DEFAULT 0000)
- <MASTER CODE (USER 1)> (DEFAULT 1111)

### 2. ZONES

- **ZONE MESSAGES**  
ZONE 1 TO ZONE 64
- **ZONE FUNCTION**  
DEFAULT ZONE PROGRAMMING  
(Default EOL Value: 2K2 with 1K Tamper)  
**ZONE 1** - Entry Exit (E)  
**ZONE 2** - Follow (P)  
**ZONE 3** - Follow (P)  
**ZONE 4** - Follow (P)

### 3. OUTPUTS

- **OUTPUT MESSAGES**  
**OUTPUT 1** - OUTPUT 1  
**OUTPUT 2** - EXTERNAL SIREN  
**OUTPUT 3** - STROBE  
**OUTPUT 4** - INTERNAL SIREN
- **OUTPUT FUNCTION**  
**OUTPUT 1** - MULTIFUNCTION, PULSE 5 SEC, NORMAL  
**OUTPUT 2** - ALARM, 4 MIN, AUTO RESET  
**OUTPUT 3** - SIREN MEMORY, AUTO RESET  
**OUTPUT 4** - INTERNAL SIREN, 4 MIN, AUTO RESET

### 4. PERIPHERALS

- **EXPANSION PERIPHERALS** - ALL DISABLED
- KEYPADS** - KEYPAD 1 ENABLED

### 5. OTHER PARAMETERS

- **TAMPER AP** - OFF
- QUICK ARMING** - (GROUP 1, AREA 1)
- SPEAKEPHONE** - ON
- SIREN TO KEYPAD** - ENABLED
- SIREN SQUAWK** - (REMOTE, AREA 1)
- LIFE TEST**  
START - 02:30AM  
INTERVAL - 1 DAY

### 6. AREAS

- **AREAS**  
**AREA 1** - ALL ZONES  
**AREA 2** - NO ZONES  
(INSTALLER SPECIFIED)
- **AREA MESSAGES**  
**AREA 1** - ALL AREAS  
**AREA 2** - STAY
- **AREA EXIT TIMES**  
**AREA 1** - 60 SECONDS  
**AREA 2** - 60 SECONDS

### 7. GROUPS

- **GROUPS**  
**GROUP 1** - LINKED TO AREA 1 <ALL AREAS>  
**GROUP 2** - LINKED TO AREA 2 <STAY>
- **GROUP MESSAGES**  
**GROUP 1** - ALL AREAS  
**GROUP 2** - STAY

### 8. CONTACT ID

- ALL EVENTS ENABLED BY DEFAULT

### 9. ARMING LOCK

- ALL OPTIONS DISABLED

### 10. PSTN

- PSTN DISABLED

### 11. NETWORK SETUP

- **CLOUDSERVICE** - ENABLED
- CLOUD ACCOUNT**  
(USER ID - 0000)  
(PASSWORD - 777777)
- LAN PARAMETERS** - DHCP ENABLED
- APP NOTIFICATIONS** - ALL ENABLED

### 12. PRIORITY CARRIERS

- **PRIORITY 01** - LAN
- PRIORITY 02** - MOBILE DATA
- PRIORITY 03** - PSTN
- PRIORITY 04** - OFF