

ENTER/EX DELAY	(1) (1) (1) + 030 + #?	(2) + 060 + #?	
DSDL QICK ARM	(1) (2) (1) #?	+ (D)	
INSTALLER CODE	(3) (3) #?	1111 + #?	
GRAND MASTER CODE	(3) (2) #?	1234 + #?	
USB INSTALLER CODE	(3) (4) #?	2222 + #?	
DSDL PSTN LOST DLY	(4) (1) (1) (1) (1)	00+ #? (DISABLE PSTN)	Applies to IP/pstn only
ENABLE CLOUD	(1) (2) (3) + cloud enable #?	(D)	
LOUD & MS CALL ALL	(4) (5) (5) + MS Call All #?	(D) + #?	

AGILITY 4 Quick Keys Pocket Card

## AGILITY 4 Quick Keys Pocket Card

<b>PROGRAM MODE</b>	(*) + 0132	PROGRAMMING + (#?)
<b>REPORT TYPE MS1</b>	(4)(2)(1) (#?) Voice (#?)	PSTN only (#?) 12345(#?)
<b>ACCOUNT MS1</b>	(4)(2)(2)(1)	001234 + (#?)
<b>PERIODIC TEST</b>	(4)(2)(6)(1)	HH:MM. (#?) 1-7 + (#?)
<b>DSBL ABORT ALARM</b>	(4)(2)(6)(2)	000 + (#?)
<b>DSBLE O/C REPORTS</b>	(4)(2)(7)(1)	do not call + (#?)
<b>MULTI-BREAK ALM</b>	(4)(2)(5)(2)	Follow Zone + (#?)
<b>EXIT PROG MODE</b>	(0) (#?)	

USE  TO GO BACK UPTO PROGRAMMING TO START AGAIN

AGILITY 4 Quick Keys Pocket Card

## AGILITY 4 Quick Keys Pocket Card

<b>PROGRAM MODE</b>	(*) + 0132	PROGRAMMING + (#?)
<b>REPORT TYPE MS1</b>	(4)(2)(1)(#?) Voice (#?)	PSTN only (#?) 1234E (#?)
<b>ACCOUNT MS1</b>	(4)(2)(2)(1)	001234 + (#?)
<b>PERIODIC TEST</b>	(4)(2)(6)(1)	HH:MM. (#?) 1-7 + (#?)
<b>DSBL ABORT ALARM</b>	(4)(2)(6)(2)	000 + (#?)
<b>DSBLE O/C REPORTS</b>	(4)(2)(7)(1)	do not call + (#?)
<b>MULTI-BREAK ALM</b>	(4)(2)(5)(2)	Follow Zone + (#?)
<b>EXIT PROG MODE</b>	(0) (#?)	

USE \* TO GO BACK UPTO PROGRAMMING TO START AGAIN