

## LOCK FOCUS COMPRESSION LATCH LOCK


Keyed security for caravans, RVs, utes, and tool boxes. Featuring a flush fitting design with ergonomic handle and compression action, the *Lock Focus Compression Latch Lock* is perfect for tough environments.

(See over page for installation cut-out dimensions)

### Required Products


- Lock Focus Compression Latch Lock
  - Red Exchange Key
  - Green Servant Key/Barrel
- (see note below for standard key install)

## Installing Exchange Barrel

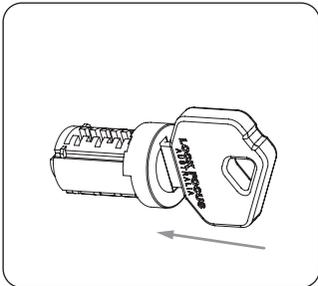


### 1. Exchange Key

Insert RED exchange key into barrel. Ensure end retainer is fully retracted

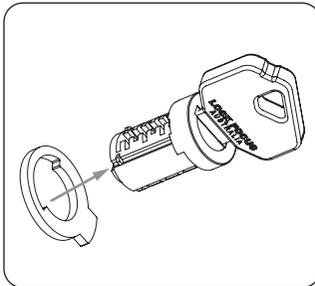


### 2. Steel Collar Cam

Fit steel collar cam over barrel. Align head shape with collar cut out so collar sits flush against the barrel head

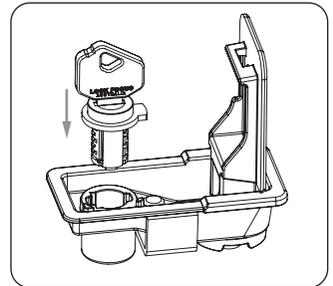


### 3. Installing the Barrel

Using the red exchange key, insert the barrel into the compression latch lock. The barrel can only be inserted in one direction, take note of orientation of barrel and cam in image above

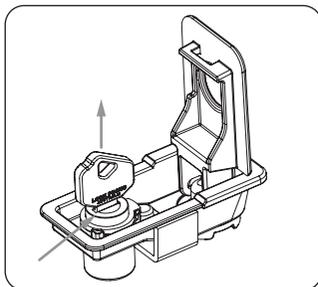


### 4. Remove Exchange Key

Hold the barrel in the housing with your thumb and remove the exchange key from the barrel. You may need to wriggle exchange key to pull it from barrel.

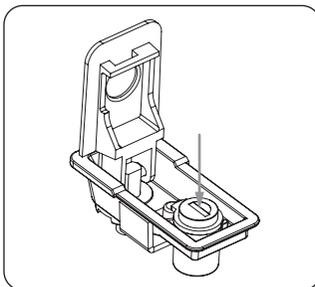

### 5. Check Barrel is Installed

Press down on the barrel head to ensure it is fully assembled in the lock housing

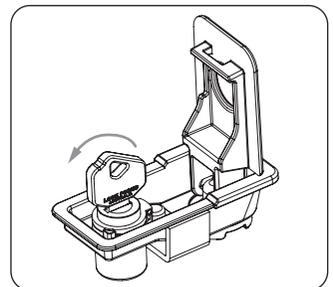


### 6. Check Operation

Use green servant key to check barrel turns 180 degrees in housing


PLEASE NOTE: Instructions outlined above are suitable for use with exchange barrel kits. If barrel is provided with standard black Lock Focus key, follow above instructions using a small, flat headed screw driver to hold down retainer while inserting barrel into housing

## Barrel Replacement

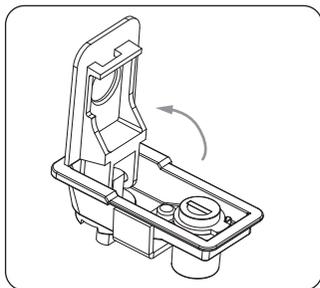


### 1. Unlock Product

Use green servant key to unlock product.  
Lift latch to expose barrel head

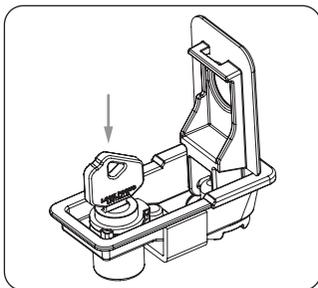


### 2. Insert Exchange Key

Insert red exchange key into barrel, you  
may need to wriggle key slightly to fully  
insert

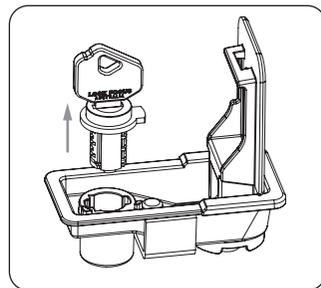

### 3. Remove Barrel

Keeping the key in the barrel, remove  
barrel from housing. Remove steel cam  
collar from around barrel and keep for use  
with replacement barrel

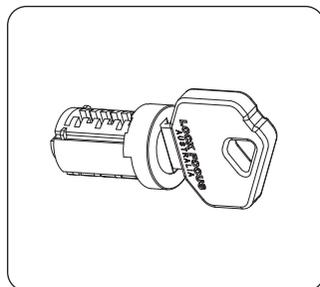

### 4. Install Replacement Barrel

Follow steps 1-5 on first page to install  
replacement barrel

## INSTALLATION CUT-OUT

