

SECURAM

Gate Lock Manual

Model No. : SH-GL01
Version No. : V 1.0.0
Doc No. : GL061625UM

General Information

Any person entrusted with working on the SECURAM Gate Lock must read and understand this manual before starting.

Intended Use

The SECURAM Gate Lock is designed to replace and upgrade your existing yard gate lock.

Safety and Caution Guidelines

- Keep away from children. Ensure children under twelve(12) use it only under adult supervision.
- Dispose of packaging in an environmentally friendly manner.
- Do not dispose of system components in household waste or the environment.
- Keep away from pets.
- Always scramble the dial code wheels after opening.
- Use with caution in extremely hot and cold weather to prevent scalding or frostbite.

Contact


SECURAM Systems, Inc.

+1 805-988-8088


techsupport@securamsys.com

www.securamsys.com


In the box

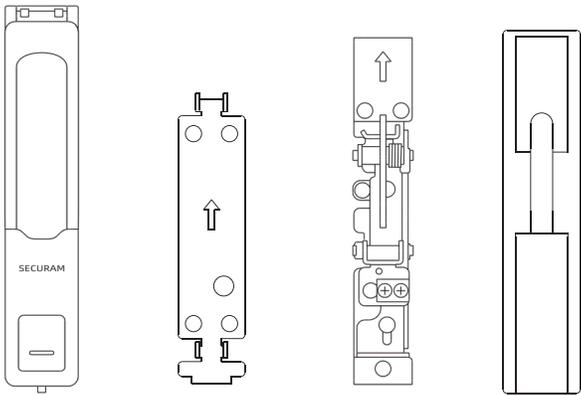

1. Front panel 2. Front panel mounting plate 3. Back panel 4. Back cover mounting plate

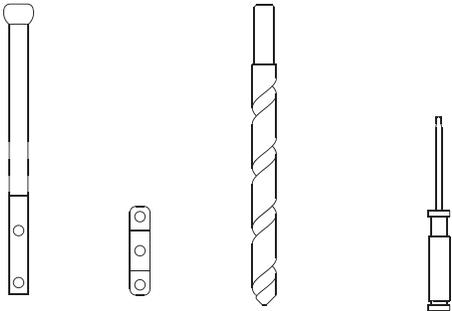

5. Latch 6. Latch bracket 7. Drilling bit 8. Hex screwdriver

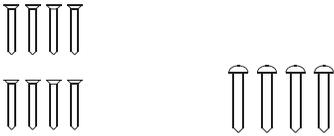

9. Front/back panel installation screws 10. Latch installation screws



11. Back cover securing screws



12. Tape



13. Latch installation template



14. Gate post drilling template

IMPORTANT

In order to install the the SECURAM Gate Lock, the gap between your door and post must less than 1.5 in.

Installation


Apart from the tools provided in the box, you will need

- a power drill
- a phillips screwdriver
- diagonal pliers




Scan here to view the installation video


Step 1: Drilling

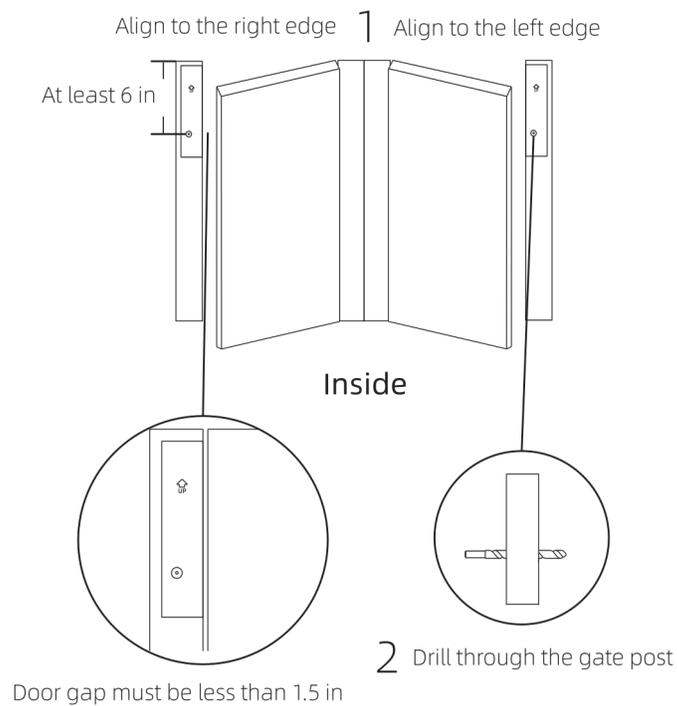

Step 2: Install the front panel

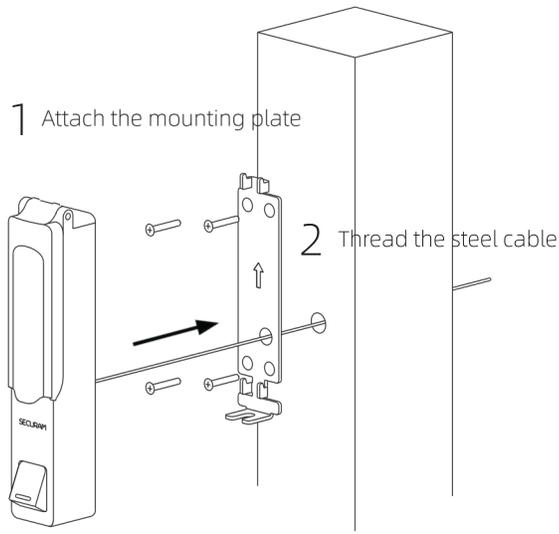

Outside

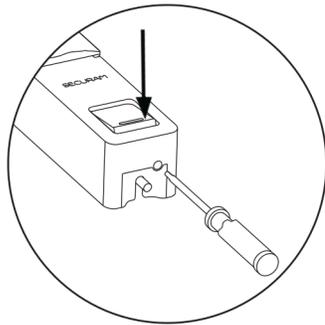


- 3 Turn the code wheels to "0000" then press down the unlock button. Secure the front panel by tightening the screws found in the holes at the bottom with the hex screwdriver


Step 3: Install the back panel

Use tape to temporarily hold front/back panel during installation if necessary


- 3 Unscrew the cable clamp

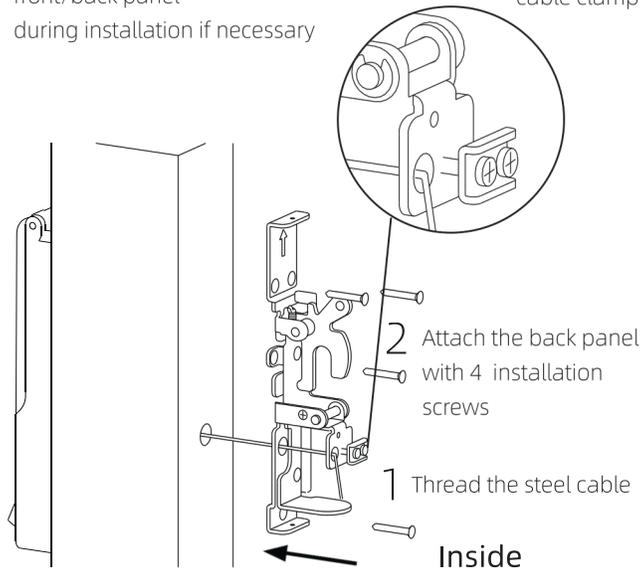


Step 4: Fix the steel cable

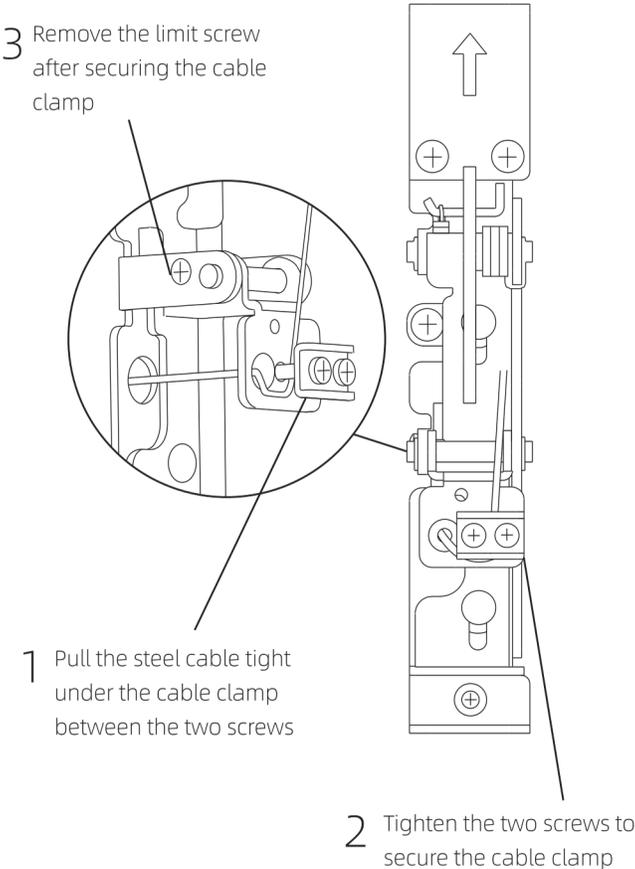

Step 5: Test

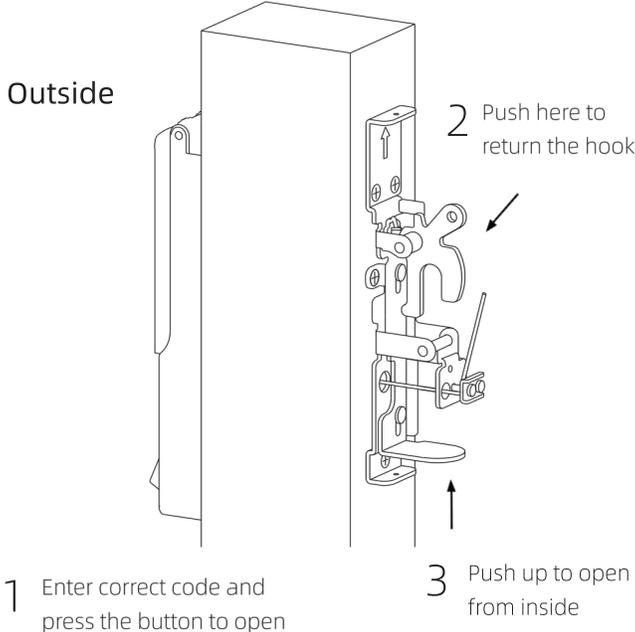

Step 6: Install the back cover

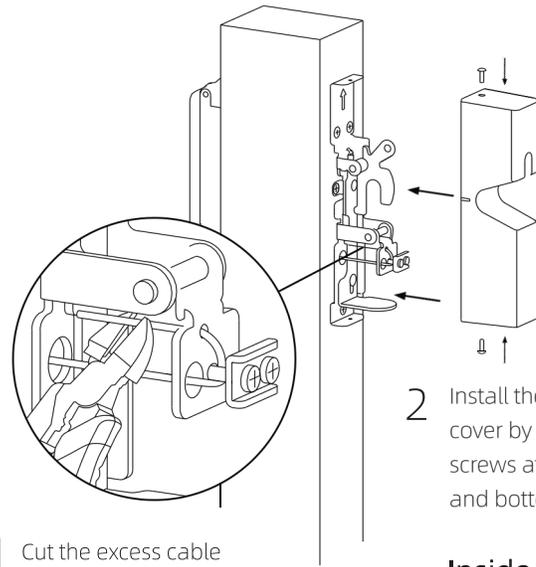


1 Cut the excess cable

2 Install the back cover by securing screws at the top and bottom

Inside

Step 7: Install the latch

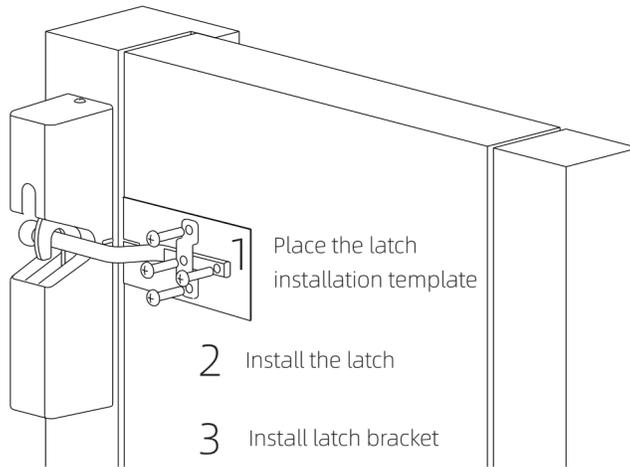

1 Place the latch installation template

2 Install the latch

3 Install latch bracket

Inside

Operation

To open from outside



- Open the Protective Cover on the Front panel
- Turn the passcode dial wheel to the correct passcode
- Press the Unlock button
- Scramble the dial wheel after opening

To open from inside

- Press up the Unlock button on the bottom of the back panel

To change Passcode

- Turn the passcode dial wheel to the correct passcode
- Push up and hold the Code-changing button during the whole process
- Turn the dial wheel to a new 4-digit passcode
- Release the Code-changing button

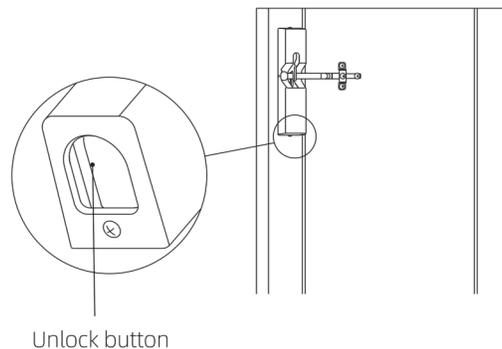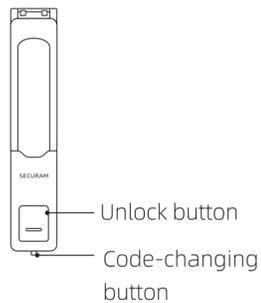

Specification

Front panel (in)	1.42 X 1.67 X 7.65
Back panel (in)	1.52 X 1.97 X 7.15
Max. door post thickness (in)	4.7
Max. door gap (in)	1.5
Code Length	4-digit

Maintenance

Keep away from acid or alkaline detergent.
Lubricants of any kind are not suggested to use in or on the product.

Warranty

SECURAM Gate Lock is covered by a limited lifetime warranty against workmanship and material defects. This warranty does not cover normal wear, misuse or lost combination code. Defective SECURAM Gate Lock product will be repaired or replaced free of charge.