

Toyota Remote

Programming Instructions

GENUINE

ENGINE
START
STOP

CAUTION
**USE STANDARD
KEY FIRST!**

TIP: PROGRAM THE REMOTE BEFORE CUTTING THE KEY!

Use a plain key for the manual remote programming procedure. This will ensure the part is chargeable to your customer, in the case of the vehicle not being in perfect working condition or the vehicle build date differing from expected.

LSC WILL NOT CREDIT CUT KEYS!

Aurion GSV40
Camry ACV40
Kluger MCU28
Prado RZJ/GRJ/KZJ/KDJ
120
Rav 4 ACA33
Tarago ACR50
Tarago GSR50
Yaris NCP 90/91/93

- Key Removed from Ignition
- Drivers Door open, all other doors closed
- Insert key into ignition then remove it - do this twice
- Close and open the drivers door twice
- Insert key into the ignition then remove it
- Close and open the drivers door twice
- Insert the key into the ignition, then close the door
- Turn the key from off to on - once to add a remote while retaining the original codes, or twice to rewrite the original remote codes (locks should cycle)
- Press the Lock and Unlock buttons on the remote at the same time for 1 second
- Press and hold any button on the remote for 2 seconds (locks should cycle once for correct programming, or twice if procedure is incomplete)
- To close programming, open the door of the vehicle.

Avensis ACM20/21
2005
Celica ZZT
Corolla ZZE122/23
Echo NCP10/13
Hilux
Rav 4 ACA20/22
Tarago ACR30

- Key removed from the ignition
- Drivers door open, all other doors closed
- Insert key into ignition then remove it - do this twice
- Close and Open drivers door twice
- Insert the key into the Ignition then remove it
- Close and Open drivers door twice
- Close the door and Insert key into the ignition
- Turn ignition from off to on and back to off - once to add a new remote while retaining the original remotes, and twice to erase original remotes
- Remove the key from the ignition cylinder (Locks will cycle once for adding remote, and twice if erase mode was selected)
- Press the Lock and Unlock Buttons on the remote at the same time for 1 second
- Press any button on the remote (Door locks will cycle once if programming is correct, and twice if unsuccessful)
- To close procedure open drivers door and insert key into the ignition

Toyota Remote

Programming Instructions

GENUINE



TIP: PROGRAM THE REMOTE BEFORE CUTTING THE KEY!

Use a plain key for the manual remote programming procedure. This will ensure the part is chargeable to your customer, in the case of the vehicle not being in perfect working condition or the vehicle build date differing from expected.

LSC WILL NOT CREDIT CUT KEYS!

Avalon MCX10

- Ensure Park/Headlights are turned off and not on auto
- Insert key into ignition
- Turn from OFF to ON 3 times leaving it in the ON position
The security LED will illuminate continuously for 5 seconds
- While the security indicator is illuminated, press the button on the remote control, hazard lights will flash
- Repeat the above step for any additional remotes (ensure the security indicator is still illuminated)

Camry ACV36

NOTE:

Programming New or Additional Remotes deactivates existing programmed Remotes. Therefore, existing Remote transmitters must be reprogrammed when new or additional Remotes are being programmed.

- Key Removed from Ignition
- Headlights off
- Insert the key into the ignition switch and cycle from Off to On three times within 5 seconds, leaving the key in the on position - PROG will appear on the clock display
- Press the button on the remote, the hazard lights will flash once
Repeat the above step for any addition remotes, ensure PROG is still displayed on the clock

Proximity

- Most proximity remotes are programmed during the transponder programming procedure